



ProDAQ 6100 Rack-mount Kit

Contents

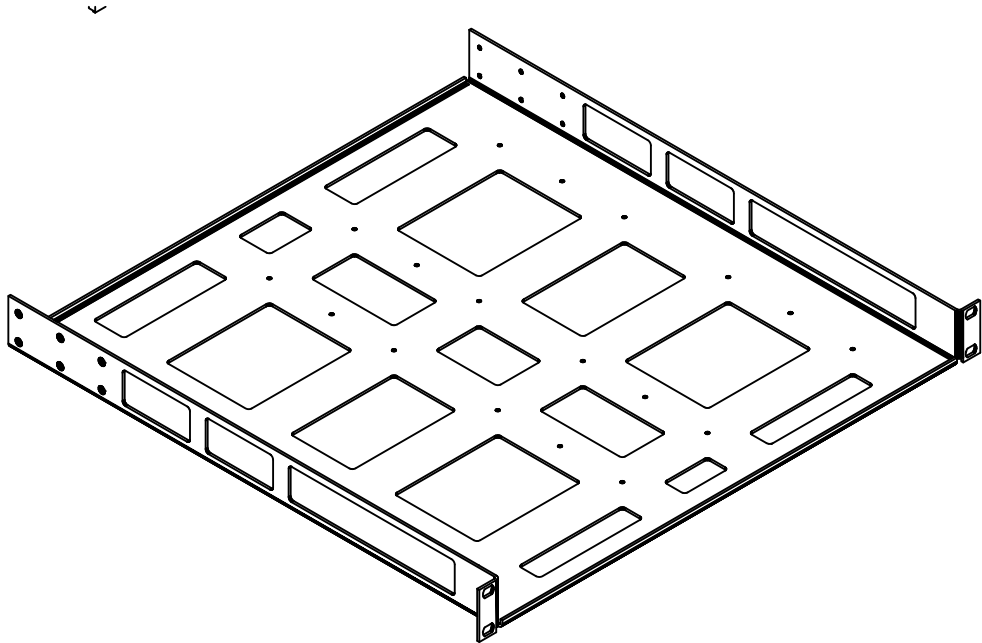

1 x 621041-1000 Rack-mount Tray

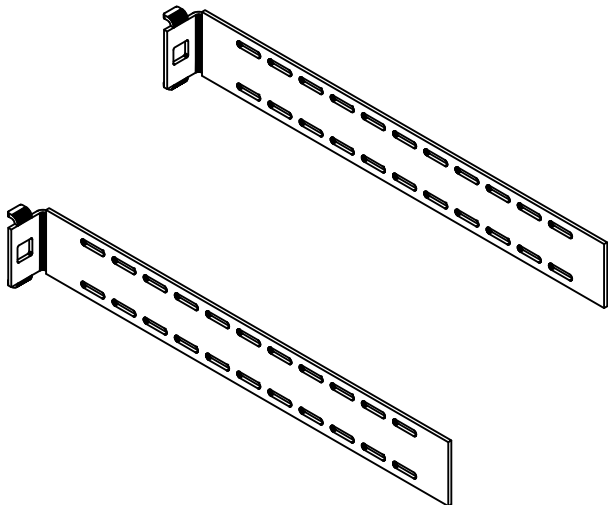

2 x 621042-1010 Rear Support



8 x Self-clinging Plastic Washer
M3, Ø15 x 1.5mm



8 x Screw M3, Countersunk, Torx, 8mm



8 x Screw M3, CSK,
Torx, 8mm




8 x Washer M3




8 x Nut M3

ProDAQ 6100 Mounting Material


Rear Support Mounting Material

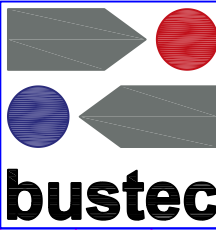	Designed by T. Rissel	Checked by	Approved by - date	File name 6210-XX-AI	Date 15-FEB-2012	Scale n/a
	Bustec Ltd. Shannon Business Park, Shannon, Co. Clare, Ireland Tel. +353 61 707 100 • Fax +353 61 707 106			ProDAQ 6100 Rack-mount Kit		
	Assembly Instructions			Doc. Rev. 1.0	Sheet 1	

ProDAQ 6100 Rack-mount Kit

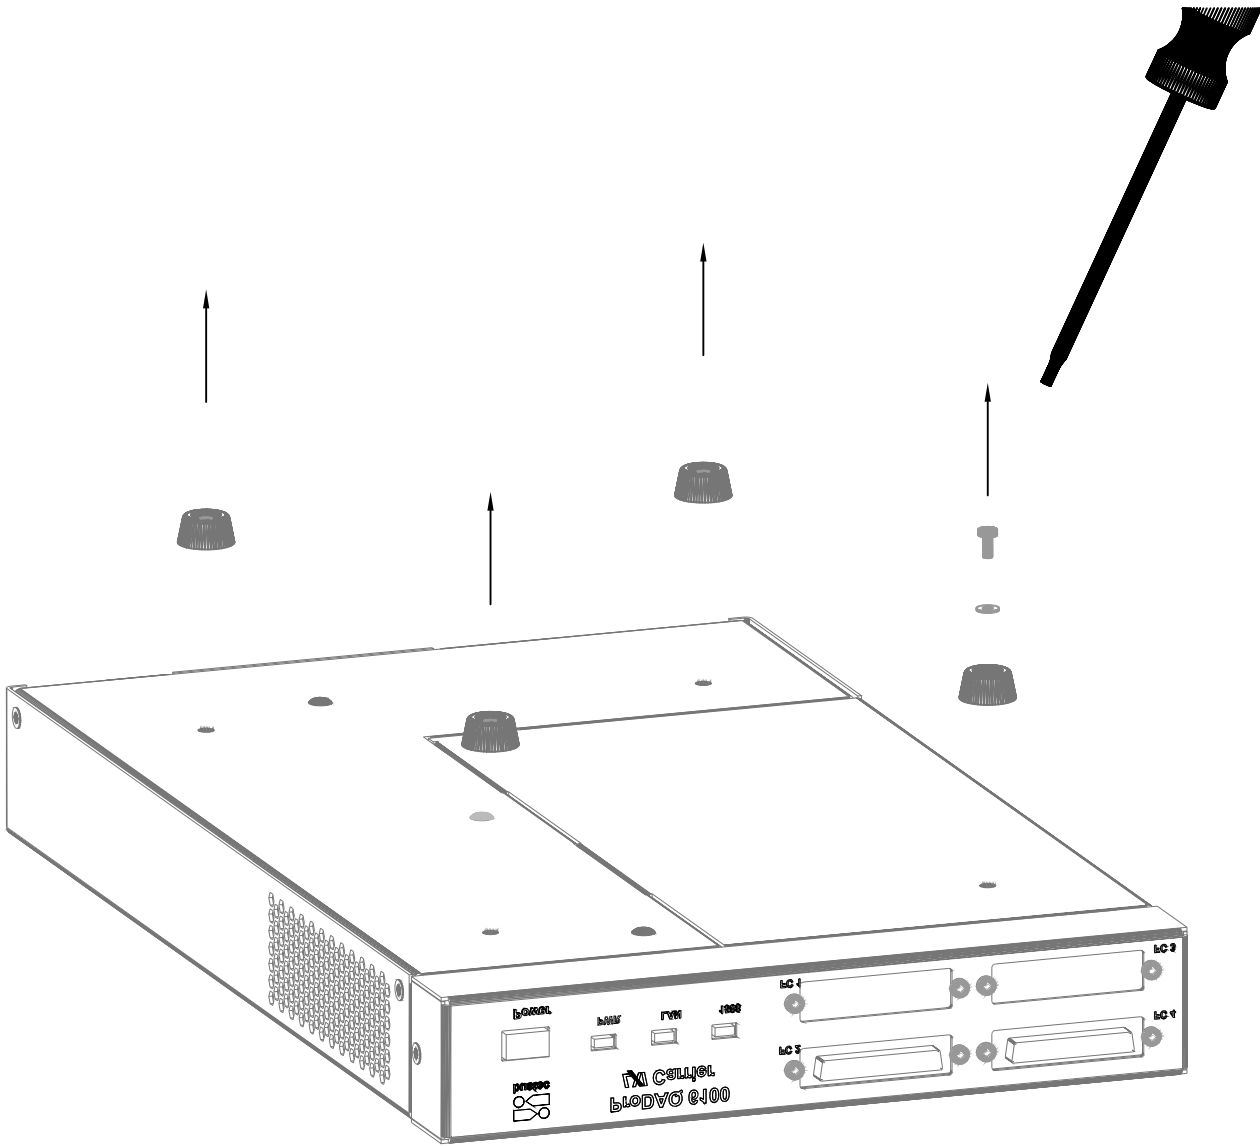


To prepare your ProDAQ 6100 for mounting it into the tray, remove the rubber feet using a size T10 screwdriver.

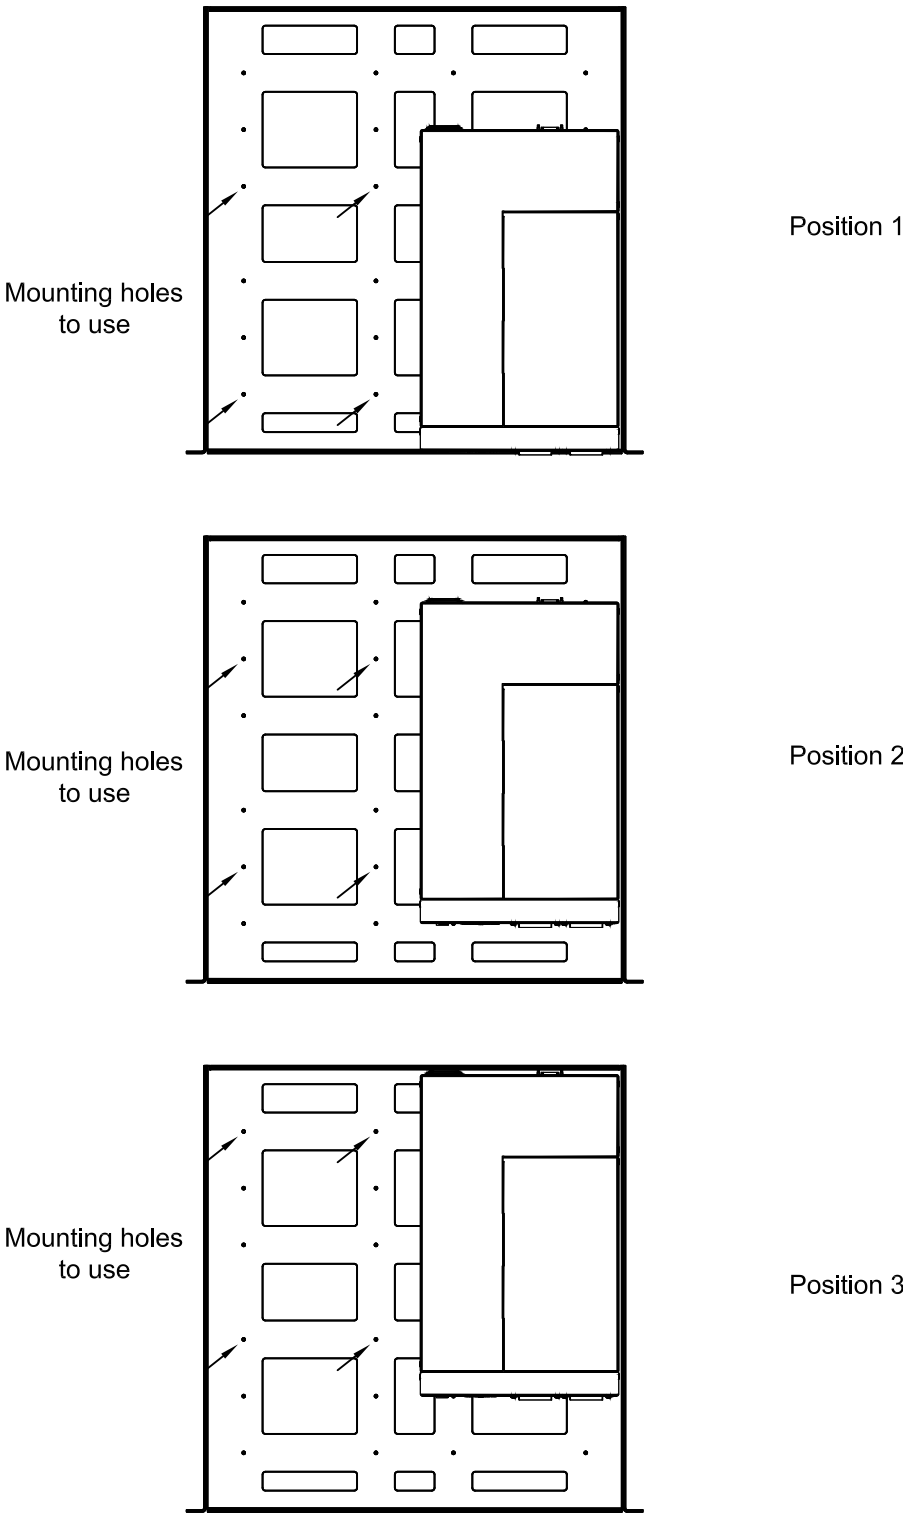



Choose a position. The ProDAQ 6100 can be mounted in three different positions on each side in the tray, leaving room for front panel connectors and cables if required.

	Designed by T. Rissel	Checked by	Approved by - date	File name 6210-XX-AI	Date 15-FEB-2012	Scale n/a
	Bustec Ltd. Shannon Business Park, Shannon, Co. Clare, Ireland Tel. +353 61 707 100 • Fax +353 61 707 106			ProDAQ 6100 Rack-mount Kit		
				Assembly Instructions		Doc. Rev. 1.0


ProDAQ 6100 Rack-mount Kit

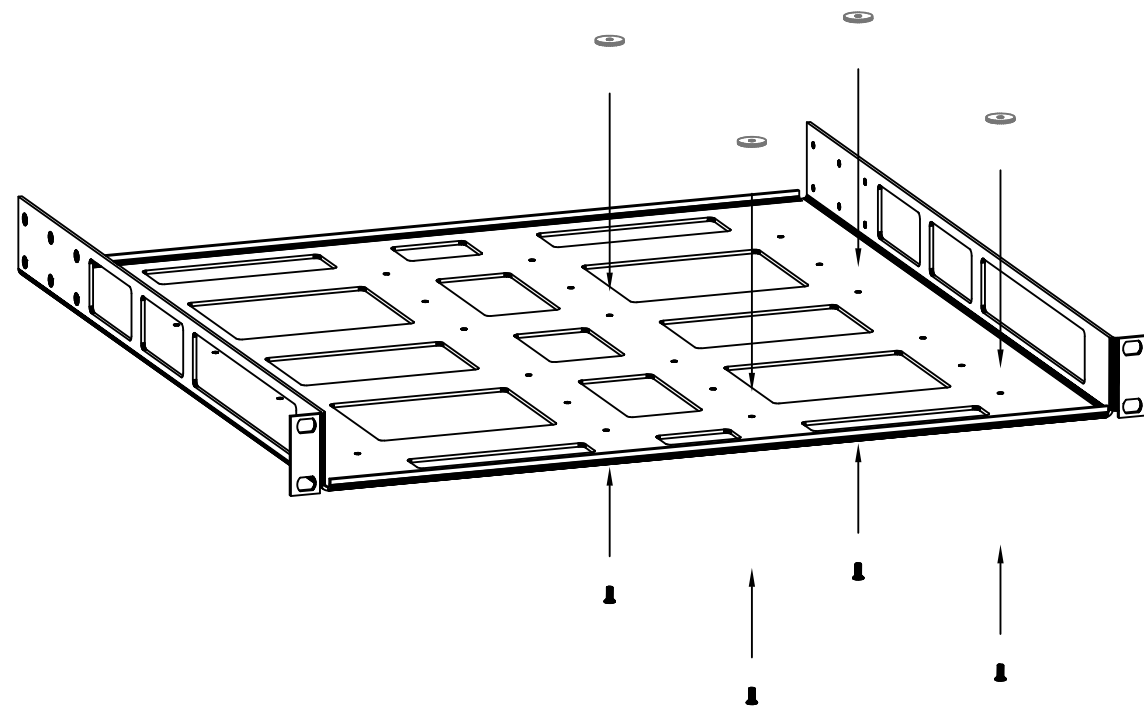


Place a self-clinging plastic washer at each of the four mounting holes of the position chosen, and push one of the M3 countersunk screws through the mounting hole from below until it sits in the washer.

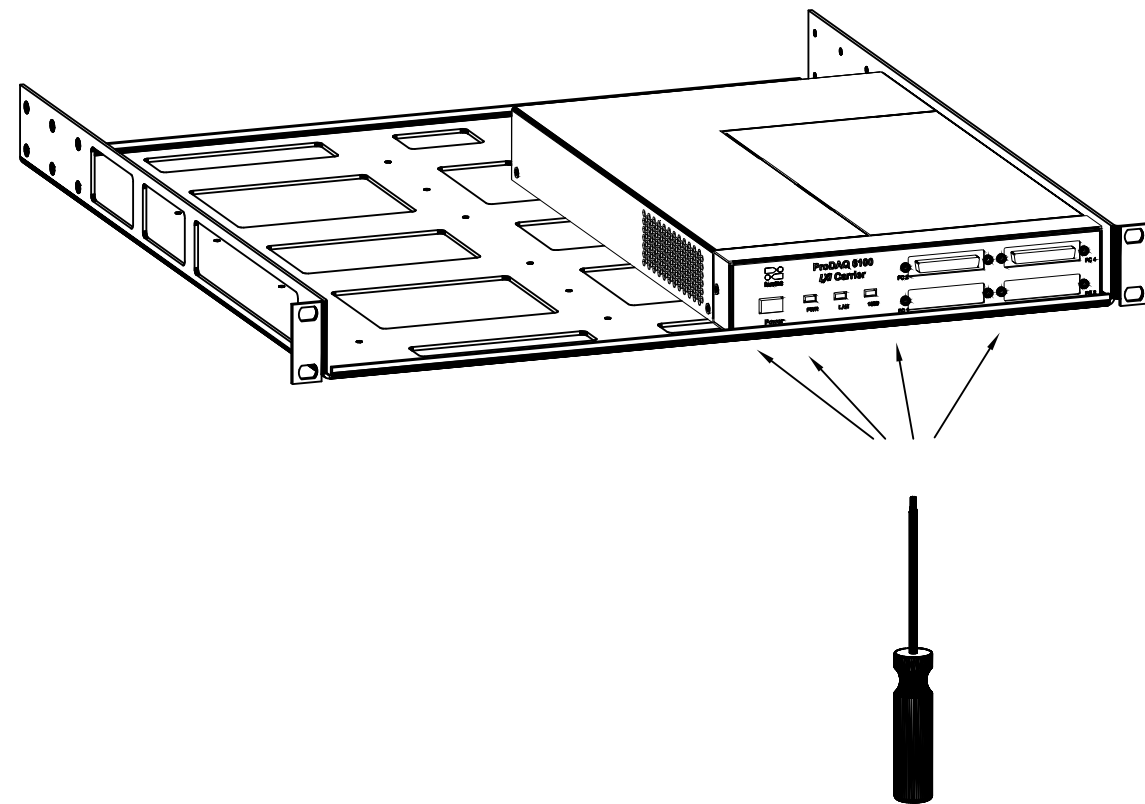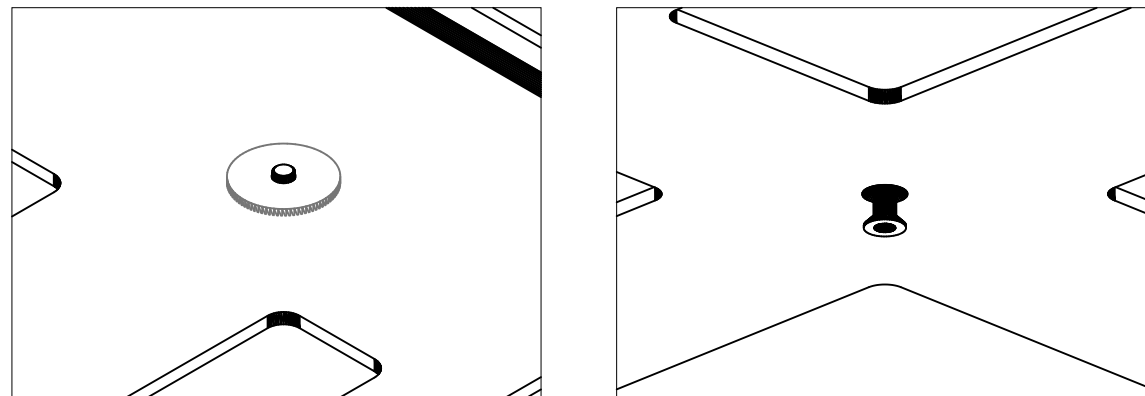


Place the ProDAQ 6100 into the tray and fasten the four M3 countersunk screws from below using the holes where the rubber feet were removed from earlier.

	Designed by T. Rissel	Checked by	Approved by - date	File name 6210-XX-AI	Date 15-FEB-2012	Scale n/a
	Bustec Ltd. Shannon Business Park, Shannon, Co. Clare, Ireland Tel. +353 61 707 100 • Fax +353 61 707 106			ProDAQ 6100 Rack-mount Kit		
Assembly Instructions				Doc. Rev. 1.0	Sheet 3	


ProDAQ 6100 Rack-mount Kit

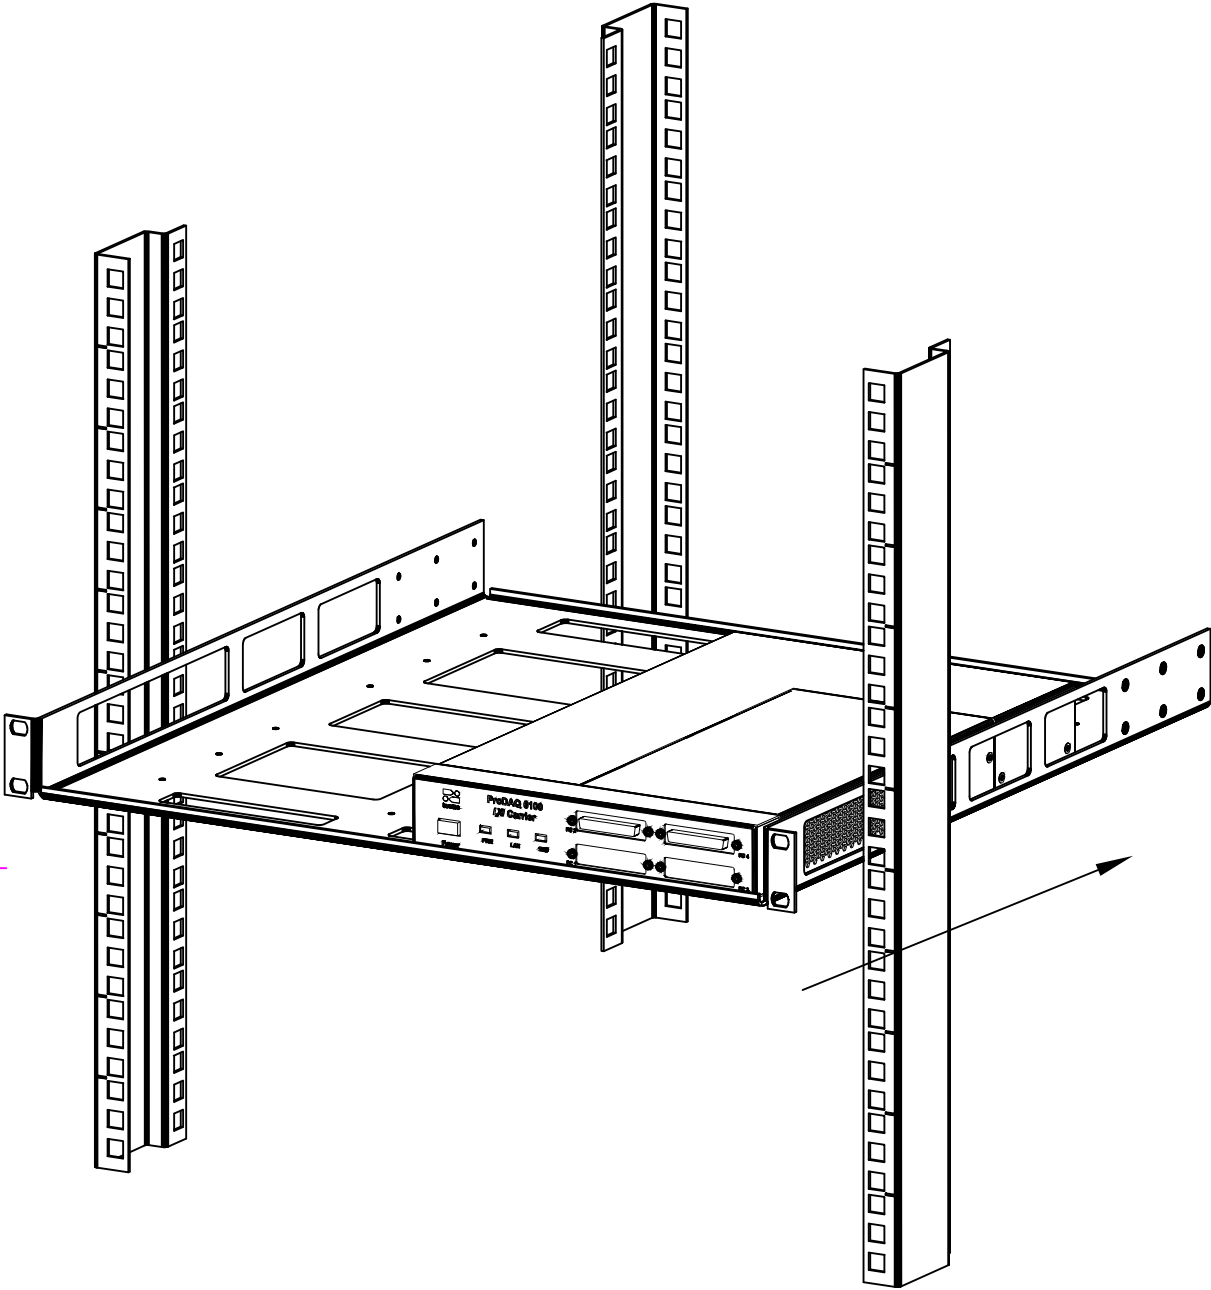


Slide the tray into the rack. Make sure the position is suitable for mounting a 1U subrack.

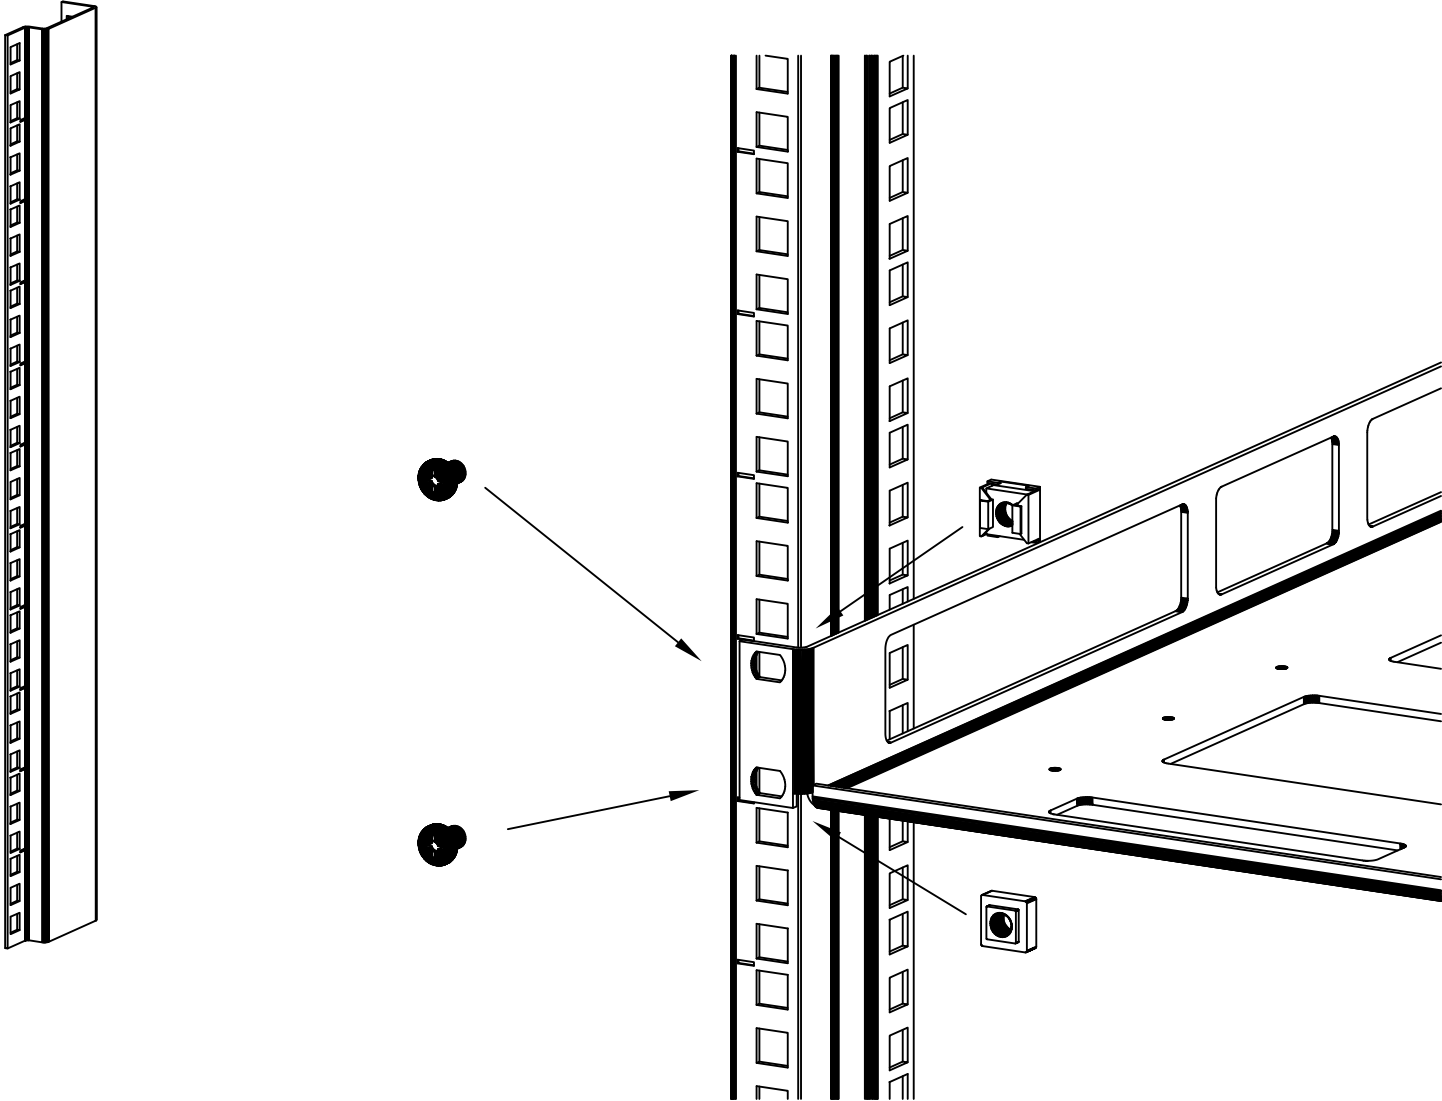


Fix the tray in the position chosen by using two sets of your rack's standard mounting features - for example M6 screws plus caged/square nuts (not part of the ProDAQ 6100 Rack-mount Kit) - on each side.

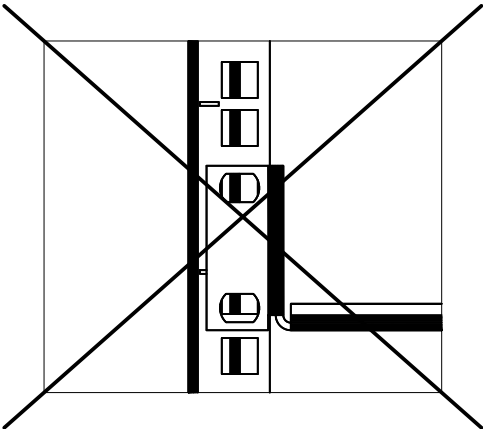


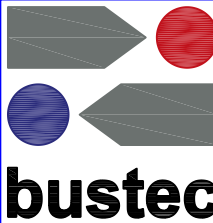	Designed by T. Rissel	Checked by	Approved by - date	File name 6210-XX-AI	Date 15-FEB-2012	Scale n/a
	Bustec Ltd. Shannon Business Park, Shannon, Co. Clare, Ireland Tel. +353 61 707 100 • Fax +353 61 707 106			ProDAQ 6100 Rack-mount Kit		
				Assembly Instructions		Doc. Rev. 1.0


ProDAQ 6100 Rack-mount Kit

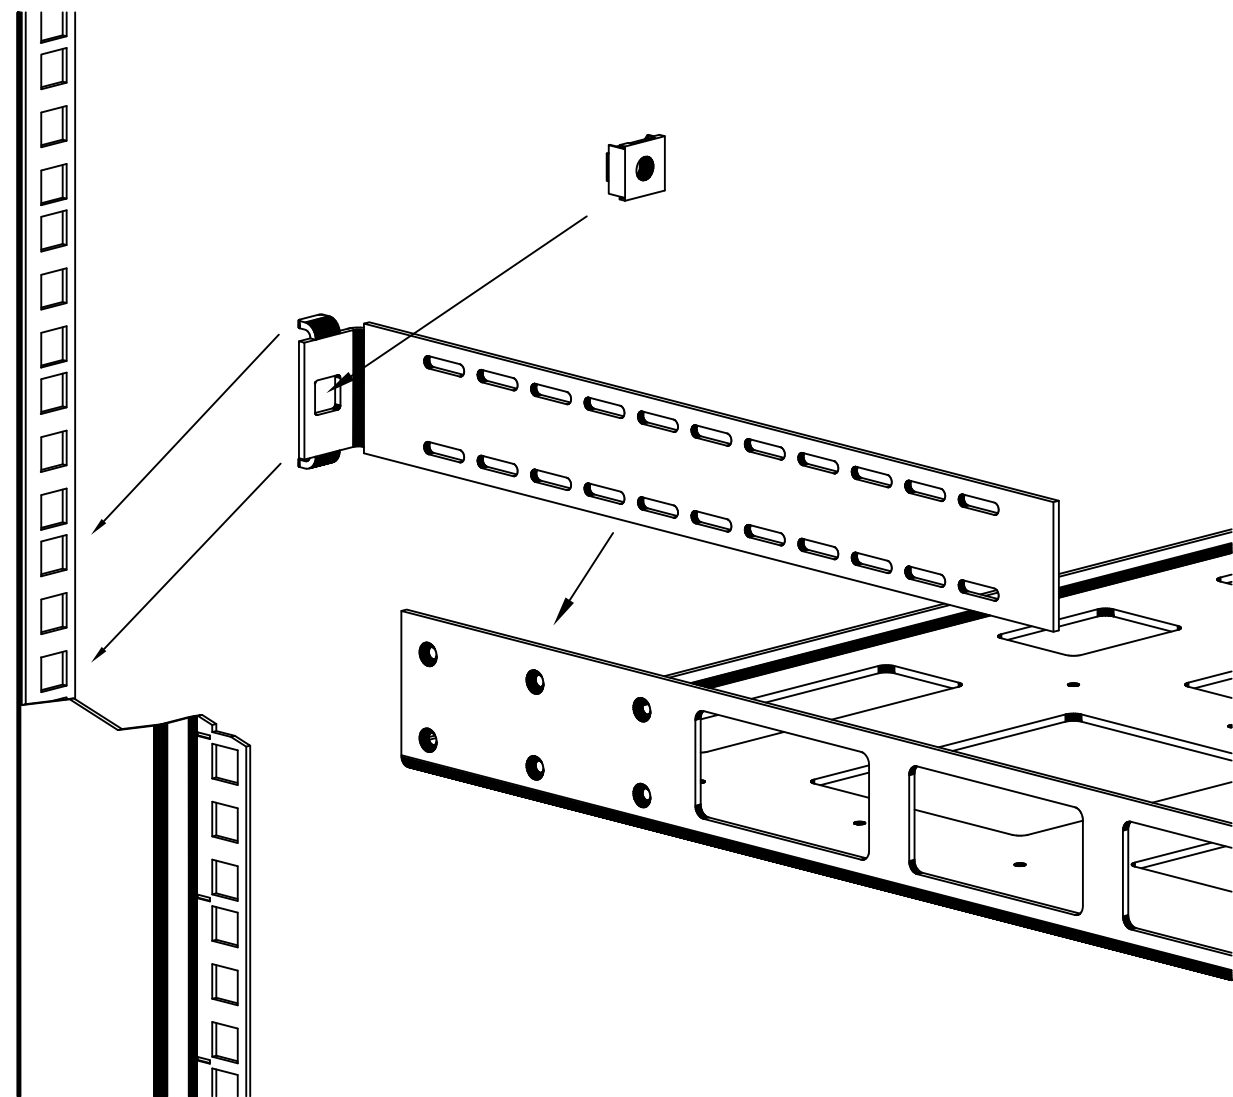

To support the tray in the rear, mount one of the rear extensions on each side. The hooks on the rear flange need to be mounted in the rack holes opposite to the ones chosen in the front. In addition the rear flange allows the mounting of a caged or square nut (not part of the rack-mount kit) to later fix the rear extension in the rack.

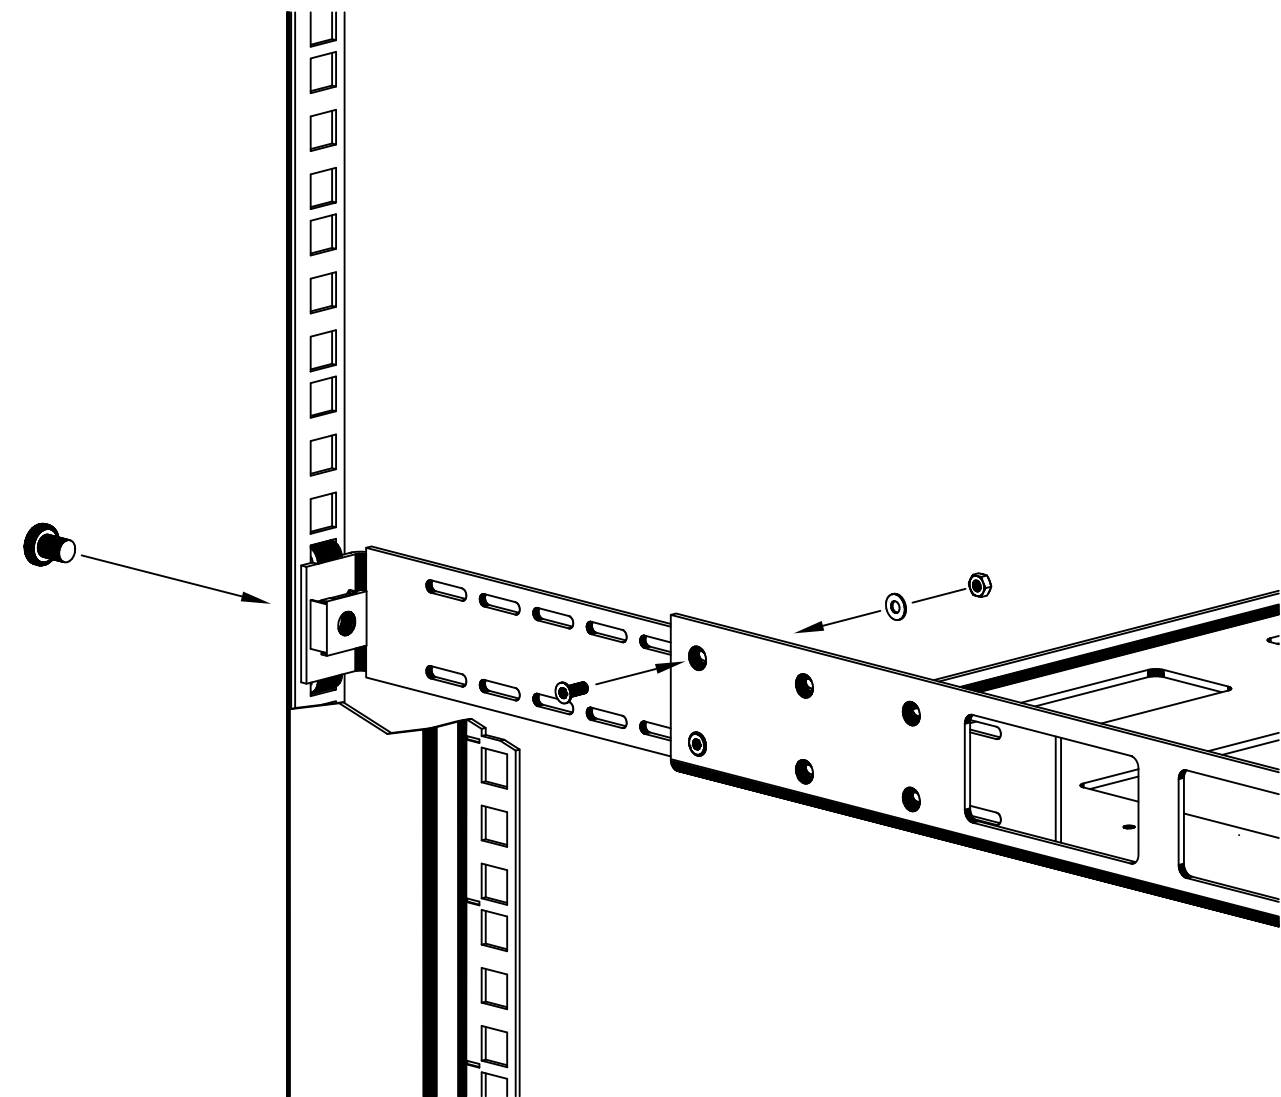

To connect the rear extension with the tray, use a M3 countersunk screw from the outside and a M3 washer and nut from the inside at least on two of the mounting positions provided.

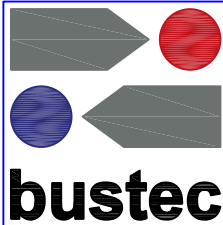

Designed by T. Rissel	Checked by	Approved by - date	File name 6210-XX-AI	Date 15-FEB-2012	Scale n/a
Bustec Ltd. Shannon Business Park, Shannon, Co. Clare, Ireland Tel. +353 61 707 100 • Fax +353 61 707 106			ProDAQ 6100 Rack-mount Kit		
			Assembly Instructions	Doc. Rev. 1.0	Sheet 5